
# Apple CarPlay & Android Auto Jaguar X150 XK/XKR



#### Apple CarPlay / Android Auto Integration Concept

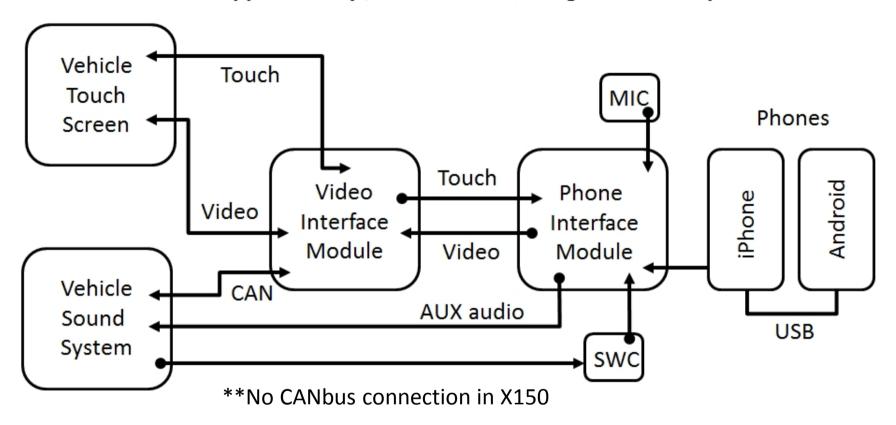


- Requires AUX input to be activated in factory radio
- 2006-2009MY (4.2L) can be activated by JLR dealer
- 2010MY-onward (5.0L) requires special programming



#### Service Functions

#### Body, Accessories, Security

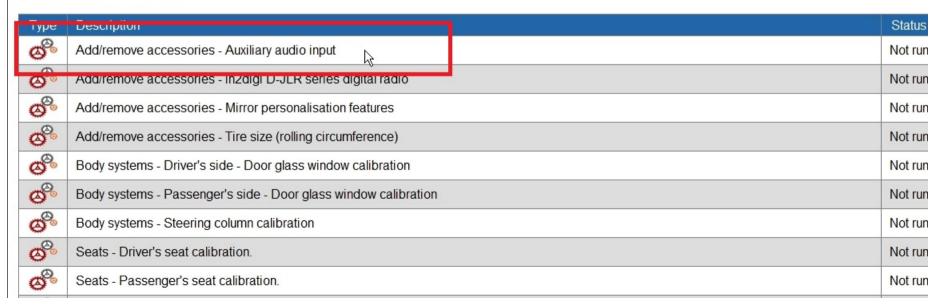




#### General layout of components

- AUX input to head unit
- SWC wire to ICM green connector.
- ACC & Ground wires from lighter
- Touch cables from screen
- Microphone to NetPlay
- USB cable
- Hidden switch
- HDMI cable between modules
- GVIF cable to screen



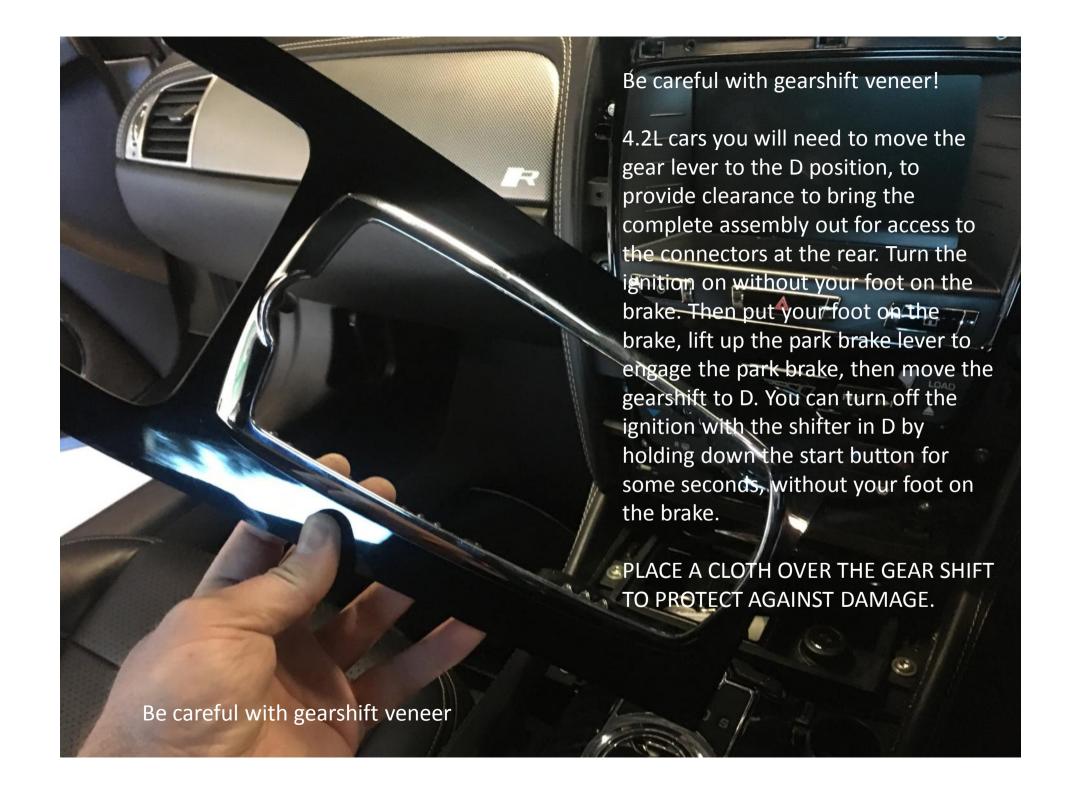















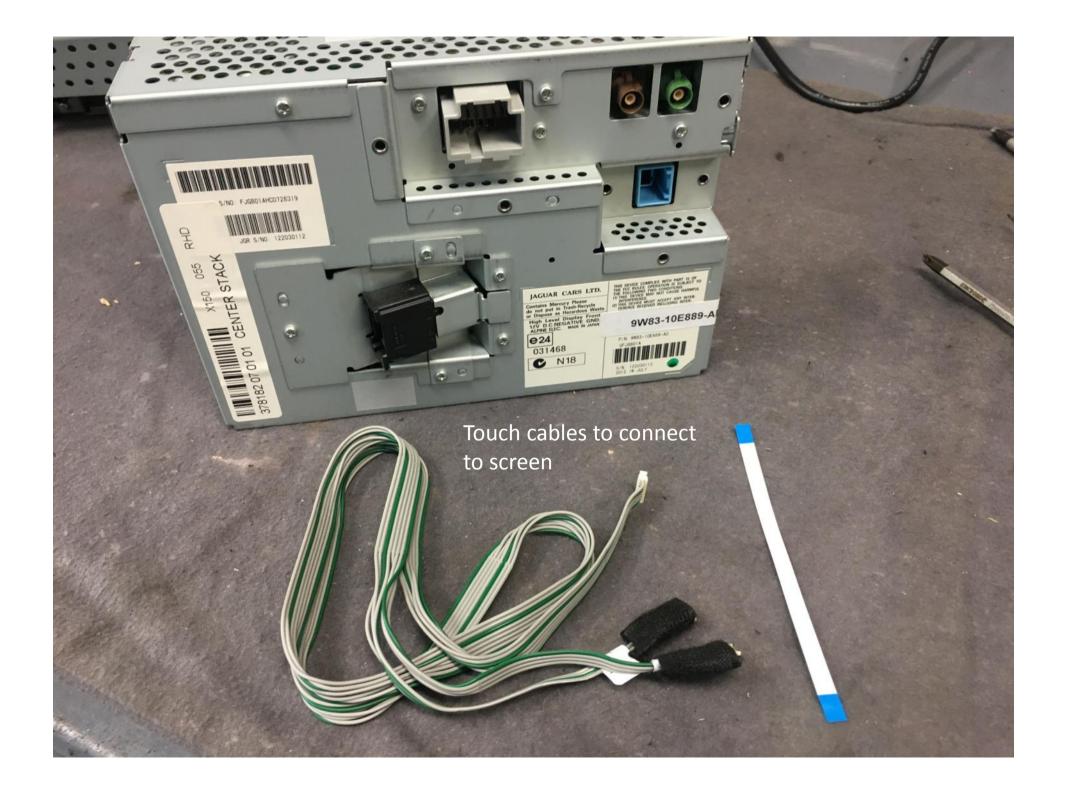


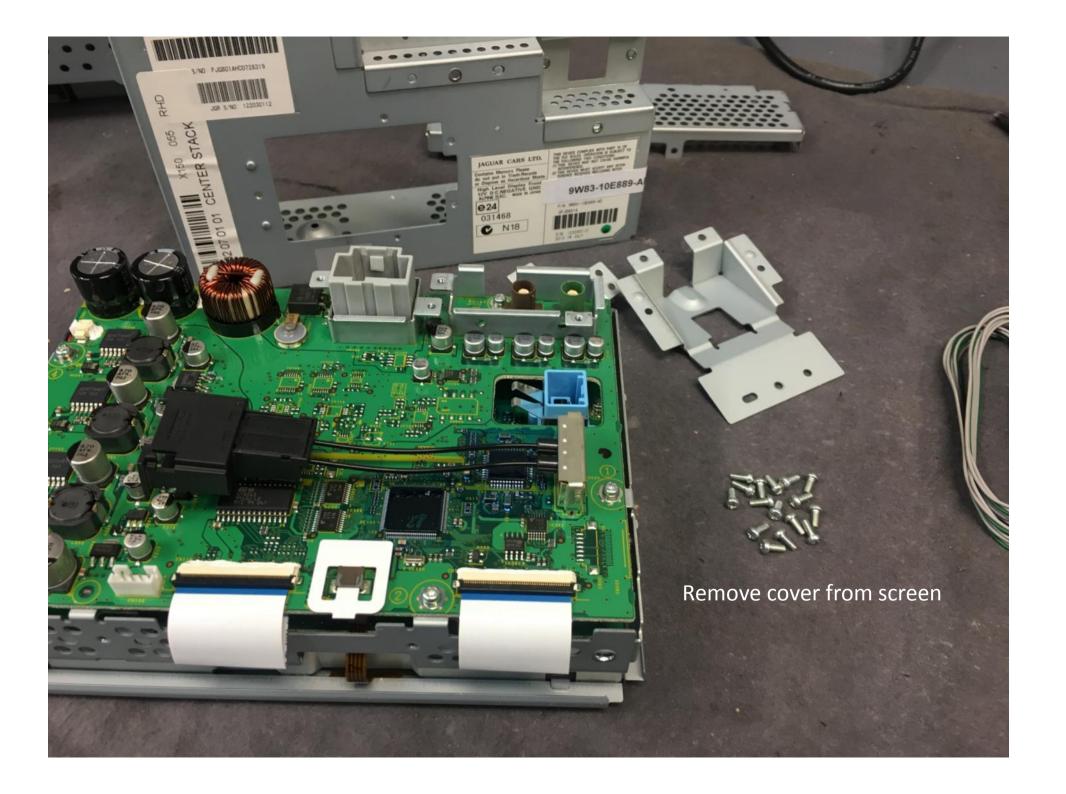


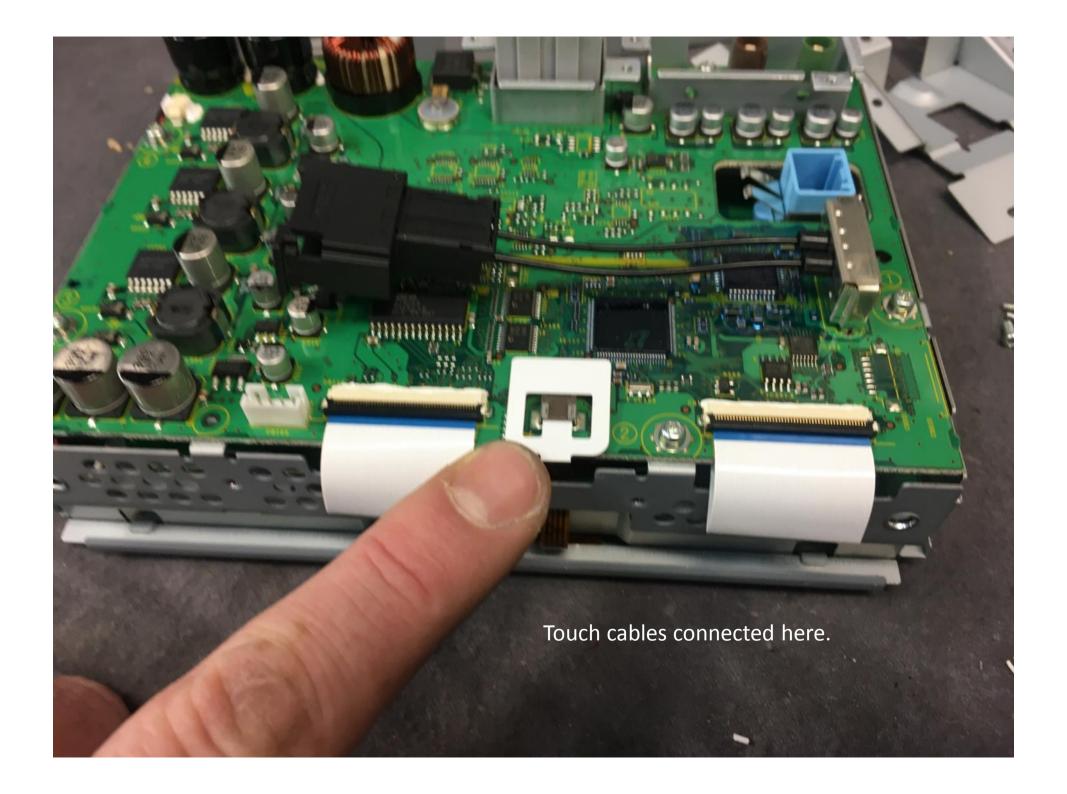




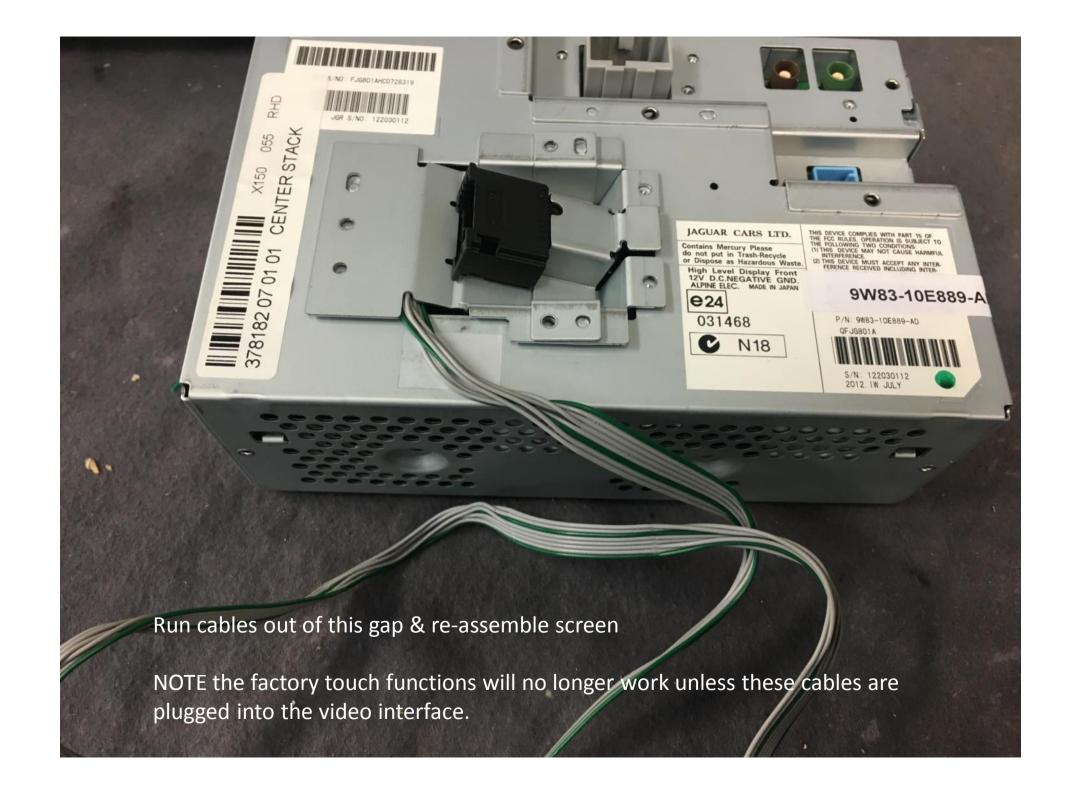

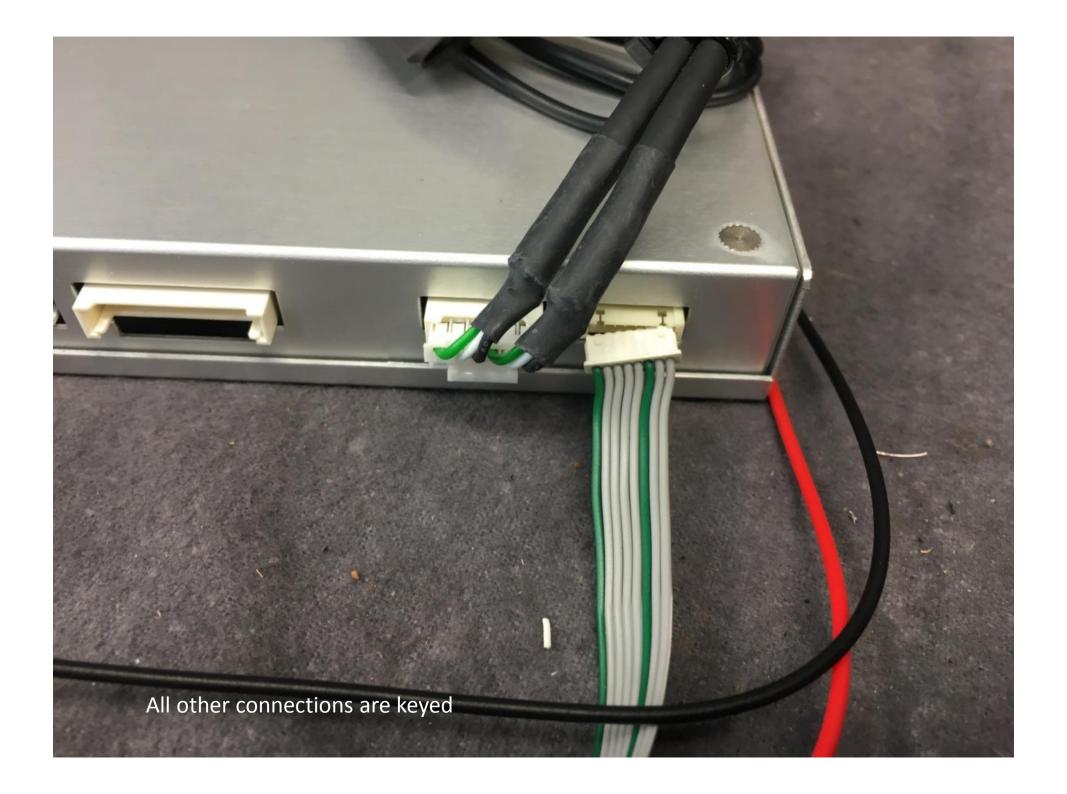

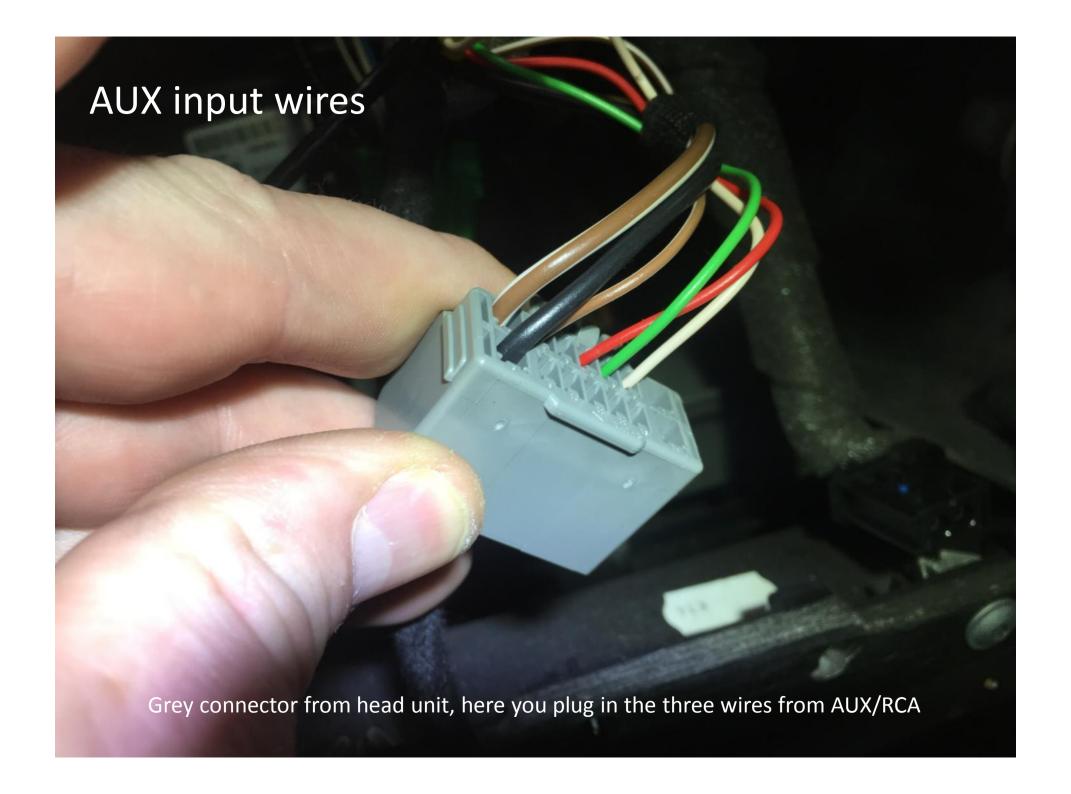



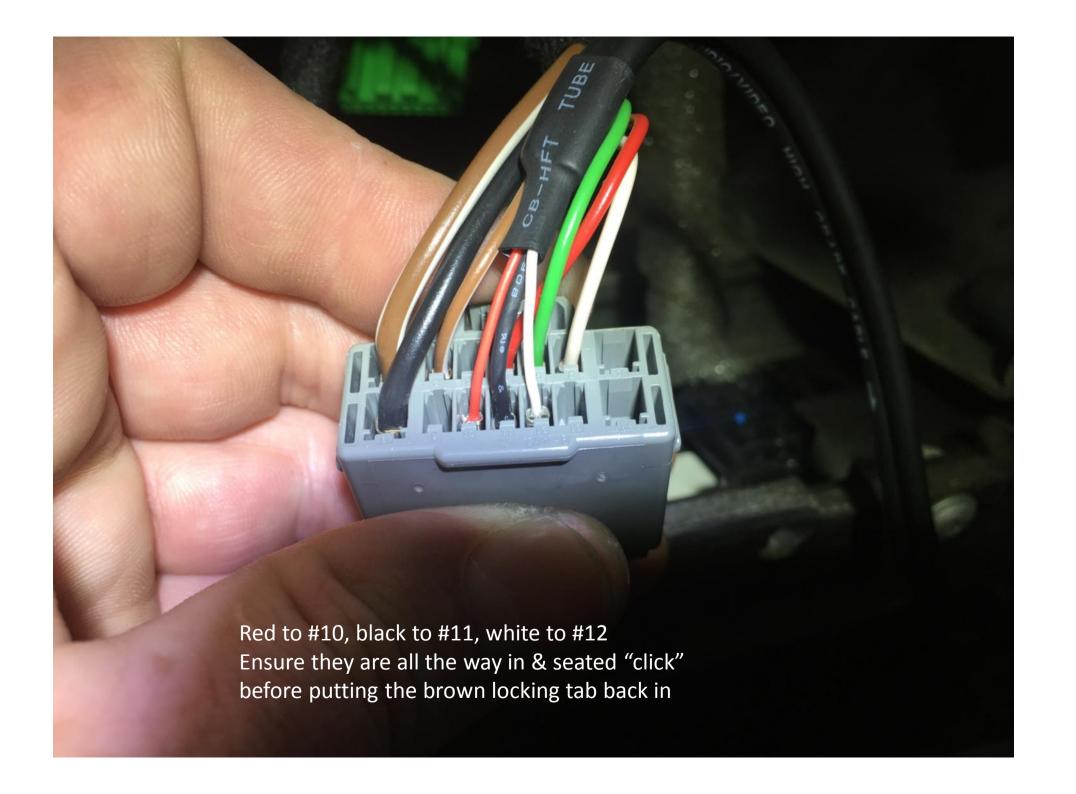


# Soldered connections


ACC & GND (cigar lighter circuit)


SWC wire at green connector (SWC)

• ILLUM-DET blue wire in rear fuse box (number plate lights.

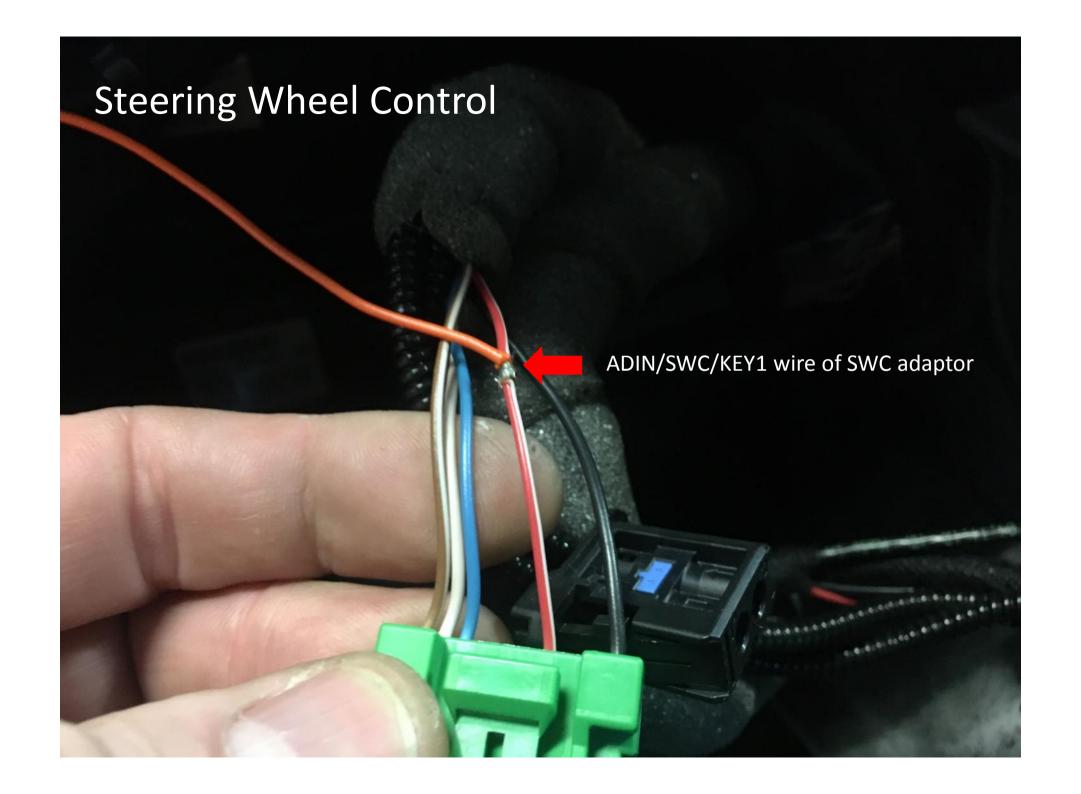




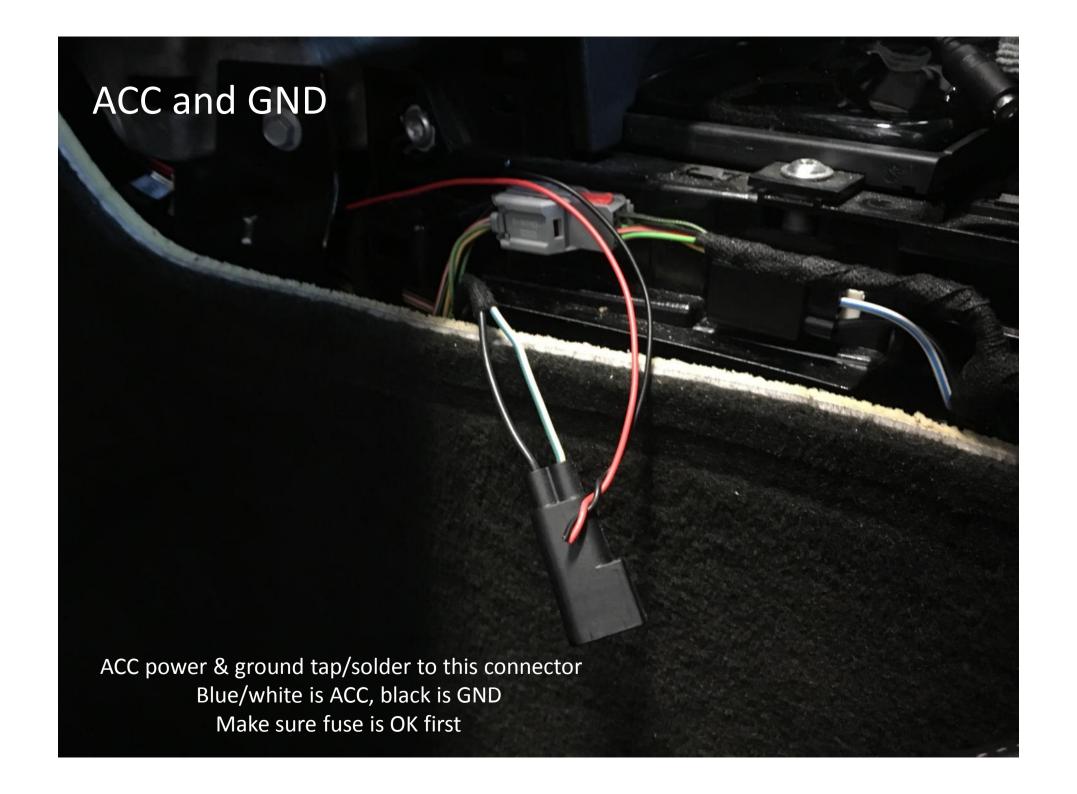

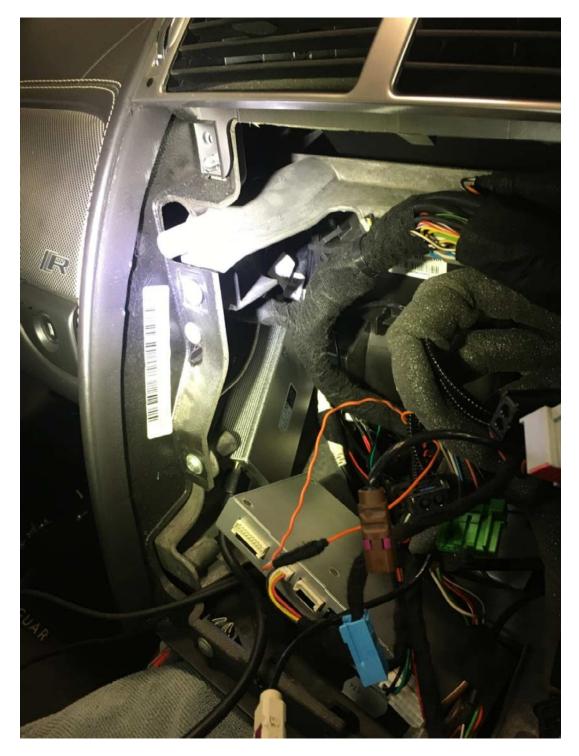

NetPlay will fit on the left side, the video interface will fit at the rear of the cavity, need to have it sitting upwards, with the HDMI socket pointing up.

Tuck all the wires away to the sides as much as possible.

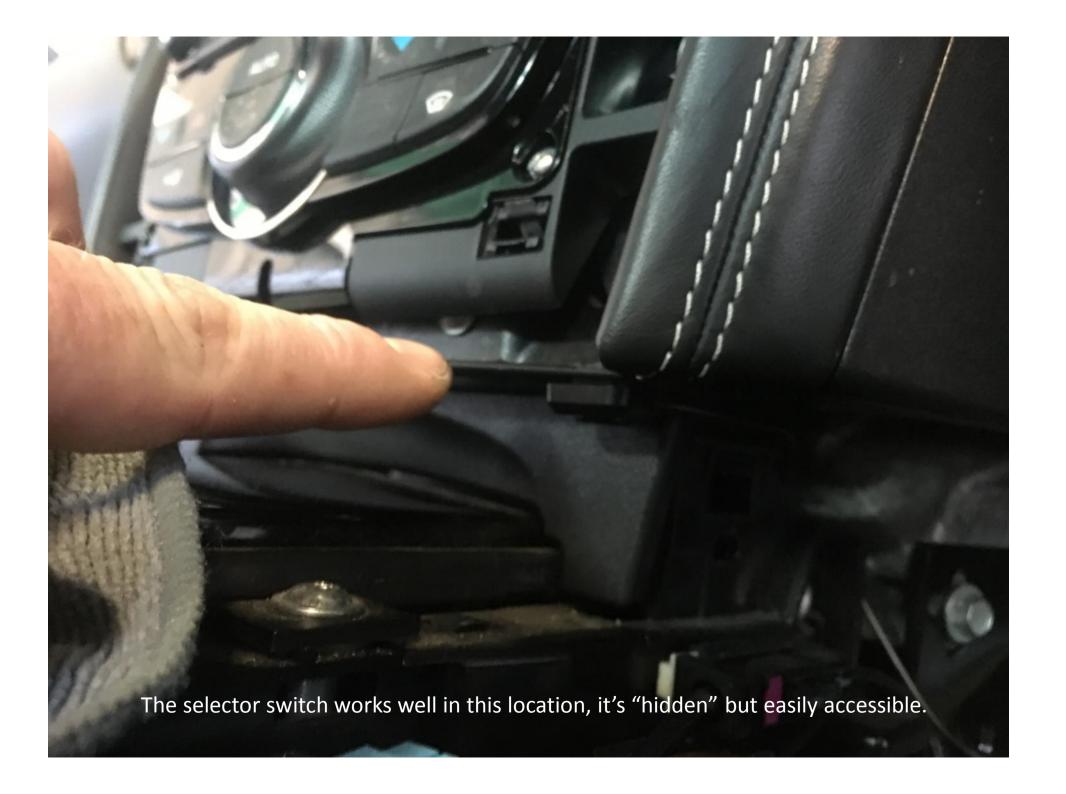


# Microphone

Run the microphone from the drivers side a-pillar under the steering column, & plug into socket on the NetPlay harness.




# Illumination Detection – CA023-13


This wire can be tapped to the number plate light circuit in the rear junction box. Blue wire, number 13 in the green connector at the top of the fuse box.

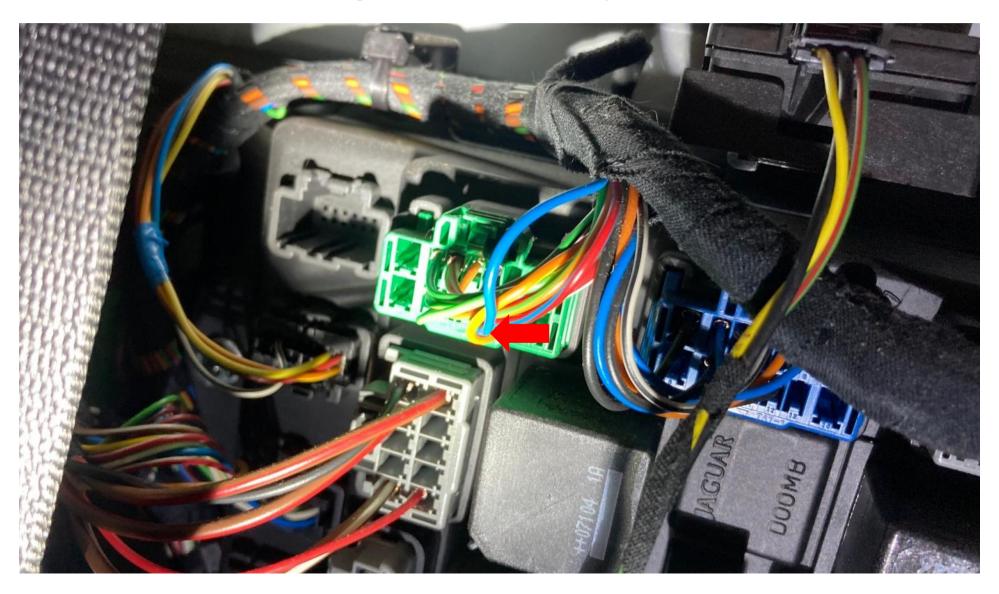

# Illumination Detection

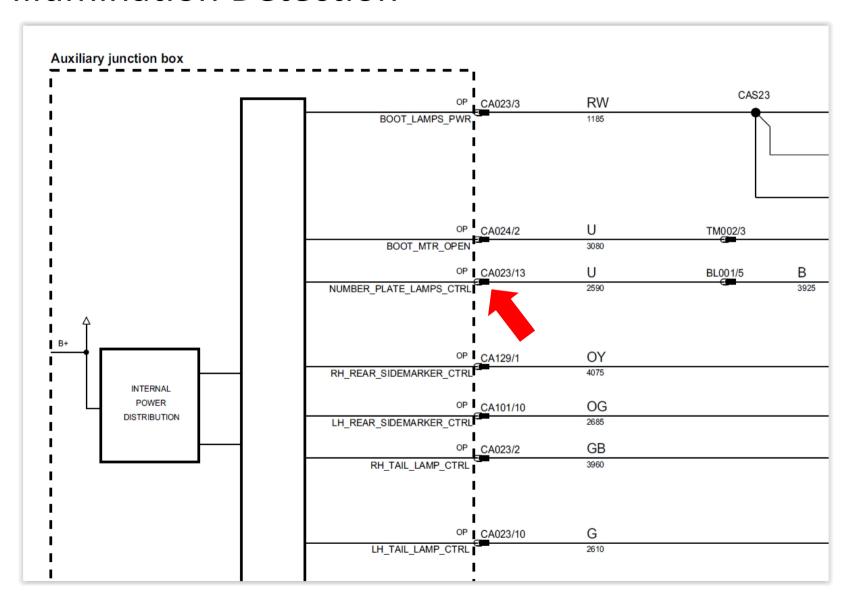

# Illumination Detection

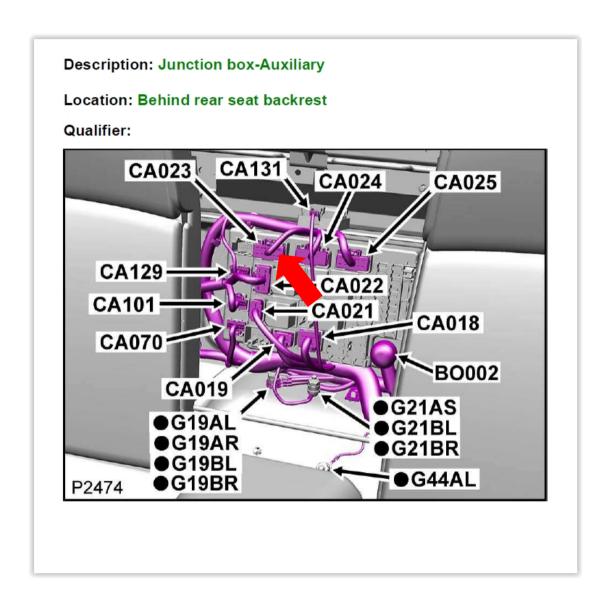

Once everything is connected you are ready to finalise the setup.

Set audio to AUX.

Go into Navigation menu.


Press switch.

The screen should be black with "no input"

Need to setup the video interface for Digital input.

### OSD(On Screen Display) Control Board



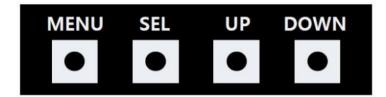


MENU	The OSD screen can be switched ON/OFF     Return to previous menu
SEL	<ul> <li>Select the currently active item</li> <li>If the OSD screen is off, mode changes can be made.</li> </ul>
UP	Move up from the menu     Increase the selected item value
DOWN	Move down from the menu     Decrease the selected item value

#### **OSD Control**

#### **Config**



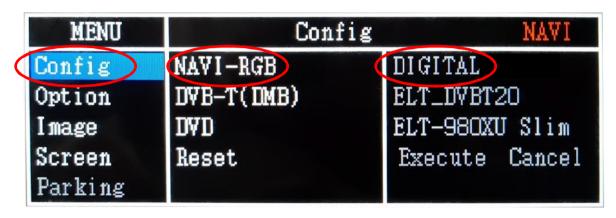

Using the keypad, set the NAVI source to Digital Config → NAVI-RGB → DIGITAL


Once set to Digital you should see the NetPlay screen in the background.

NetPlay set up.

First of all you will need to make a Touch calibration, this can be initiated two ways;

#1 press & hold the middle of the screen for 30 sec Or


#2 unplug the 4-pin touch cable that is plugged into the video interface, and short out the 4 wires for about 10 seconds, when the screen switches to the touch calibration, plug the 4-pin touch cable back in to the video interface

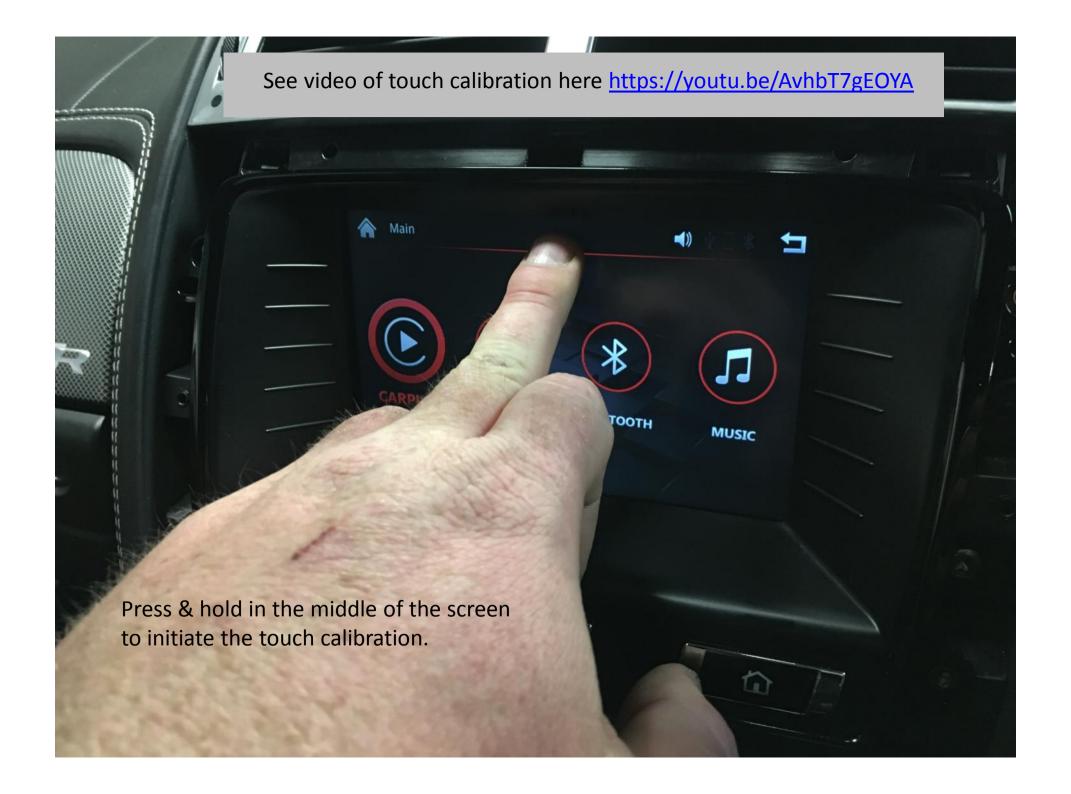







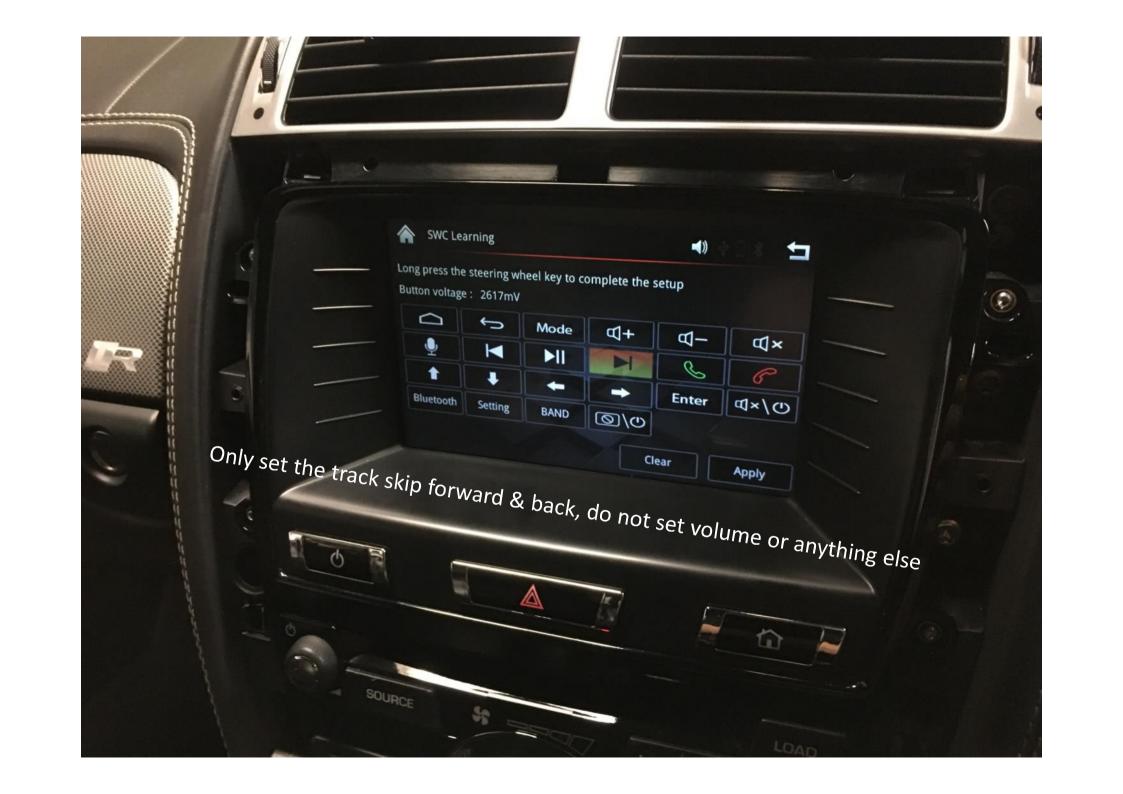







# Other tips

Dip switches on Video Interface, set 2, 3 & 4 to on, all others off.

You may need to shift the video image to the right a little (noise at far right of screen), this can be done in the menu of the video interface using the keypad

If you want to use the video interface to add a reverse camera, you will need to add a trigger wire from the reverse lamp circuit, and set up the camera in the video interface menu. (note camera can only be displayed in when in the Navigation menu, same as the NetPlay).

Remember the operation of switching between factory screens & NetPlay screens

- → Go into navigation menu, press hidden button.
- → Press home hard-key, press hidden button.